Button Combination for Special Lock Modes on IFP


Modified on: Thu, 8 Dec, 2022 at 8:37 AM

As of Dec 2018 firmware update, the use of the Combination Keys to enable/disable Special Modes will be managed by the Combination Key and Combination Key PW options in the DEBUG Menu*.

This feature was implemented to prevent inadvertent Locking/Unlocking of the Special Lock Modes.

To enable the feature follow the steps below

- 1. Using the Remote Control, press INPUT 9 9 1. This will open the DEBUG MENU.
- 2. Select Other Setting

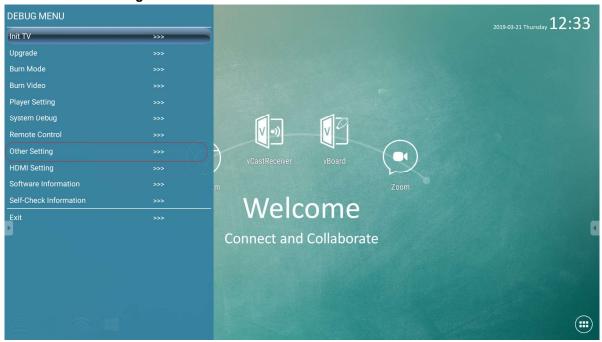

*Menu options may vary based on model

- 3. Set the Combination Key option to ON to enable the use of the Special Mode Key combinations
- 4. Select **Combination Key PW** to set a 4-digit password code. **Default is 0000**. This code will be required when using the Combination Keys to lock and unlock any of the Special Modes.






*Menu options may vary based on model

- 5. Select Back
- 6. Select Exit

Below is a listing of the button combination to Lock/Unlock the following Special Modes

For IFP50 Gen1/Gen2/Gen3 Series

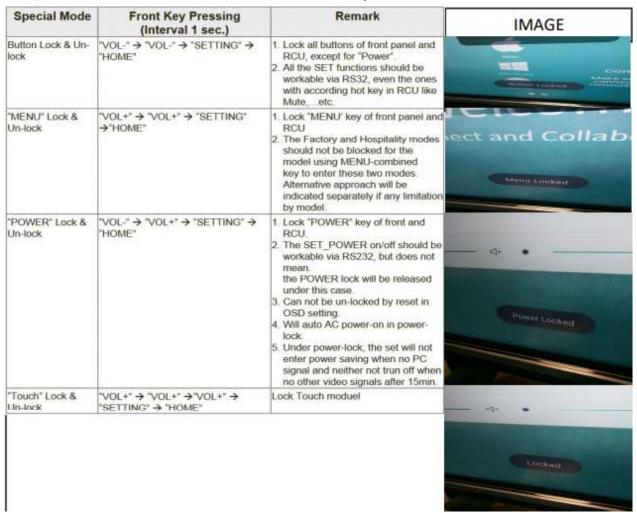

For IFP52-1C Series

Combination Key features:

Special Mode	Front Key Pressing	Remark
(Interval 1 sec.)	Remark	All buttons of front panel except for "POWER".
Button Lock & Unlock	"VOL-" → "VOL-" → "Back key" → "HOME"	All buttons of front panel except for "POWER"
MENU/Input Lock & Unlock	"VOL+" → "VOL+" → "Back key " → "HOME"	"MENU" and "INPUT" keys on front panel and remote control will be locked. The feature also disables the gesture input source menu.
POWER Lock & Unlock	"VOL-" → "VOL+" → "Back key " → "HOME"	Disable the power key feature.
"Touch" Lock & Unlock	"VOL+" → "VOL+" → "VOL+" → "Back key" → "HOME"	Touch function will be disabled if trigger the function.

For IFP52-1A Series

Combination Key features:

Special Mode	Front Key Pressing	Remark
(Interval 1 sec.)	Remark	All buttons of front panel ex- cept for "POWER".
Button Lock & Unlock	"VOL-" → "VOL-" → "Freeze " → "HOME"	All buttons of front panel ex- cept for "POWER"
MENU/Input Lock & Unlock	"VOL+" → "VOL+" → "Freeze " → "HOME"	"MENU" and "INPUT" keys on front panel and remote control will be locked. The feature also disables the gesture input source menu.
POWER Lock & Unlock	"VOL-" → "VOL+" → Freeze " → "HOME"	Disable the power key feature.
"Touch" Lock & Unlock	"VOL+" → "VOL+" → "VOL+" → "Freeze " → "HOME"	Touch function will be dis- abled if trigger the function.

*When accessing the DEBUG Menu only make changes as instructed by ViewSonic Support.